



Catalogues

Product installation instructions

Solar Light



Time
switch




Intelligent
light control




Wireless
remote control

Applicable model

VT-10W VT-100W
 VT-25W VT-200W
 VT-40W VT-300W
 VT-60W

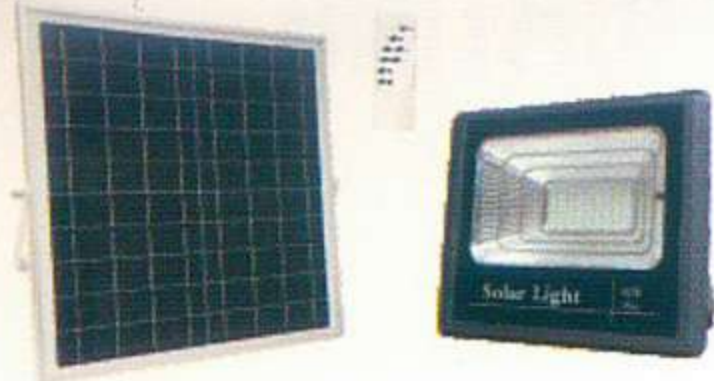

Remote control key instructions

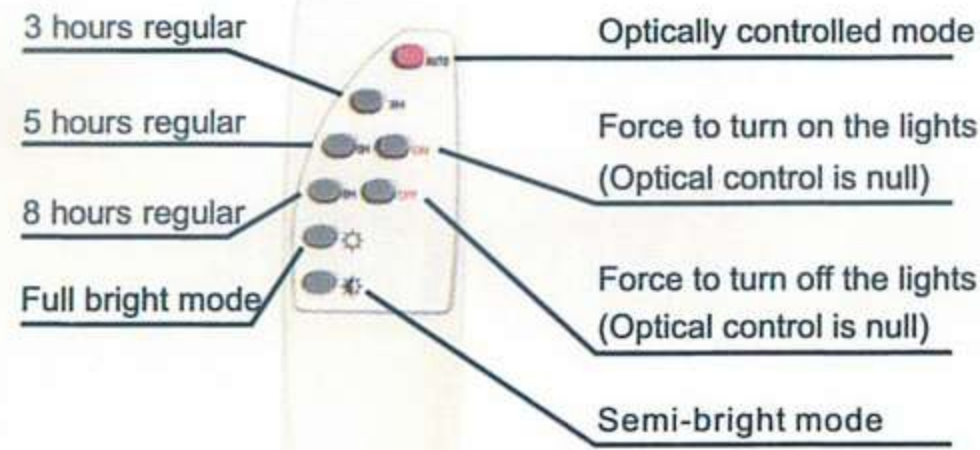

Installation Guide



Plug the twist after the twist cap


Tips The battery must be fully charged before using 3-5 rainy days.

Installation Notes





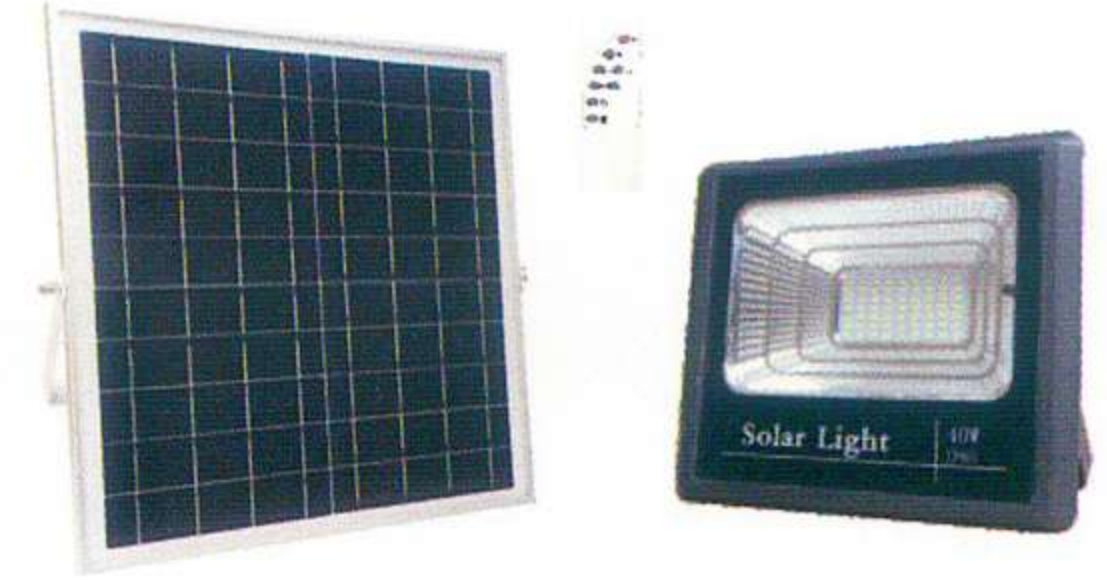

- Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;
- The lamp and solar panels connected to the solar panel against the light ,the light does not shine ,unplug the connector light ,Light sense normal;
- On the front of the lamp,5meters above the lights by AUTO(red),the button lights flash 5 under the lights And remote control is normal;
 Note: the remote control must be remote control receiver ,or remote control is not sensitive remote control distance 8-15m;
- A. the lamp with two inflated studs on the wall ,as schematically;
 B. The solar panel Angle adjusts according to the light intensity and time;
 C. lamps can not be installed in low-lying areas ,so as not to soak;
- Plug the male and female plugs and tighten the waterproof cap and install it.
- After installation check the installation is solid ,use the remote control of the lamp to check;

Applicable model

VT-10W
 VT-25W
 VT-40W
 VT-60W
 VT-100W
 VT-200W
 VT-300W



List

1		2	
	Solar panel		Solar light
3		4	
	Remote control		expansion screw
5		6	
	U-frame		5m wire