 


 
Catalogues

Product installation instructions

Solar Light



Time switch



Intelligent light control




Wireless remote control

Applicable model

VT-ST-60W
VT-ST-100W
VT-ST-150W
VT-ST-200W
VT-ST-300W



Remote control key instructions

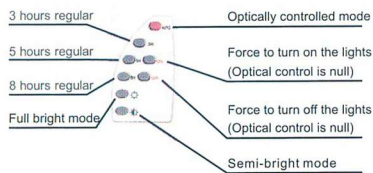


Applicable model

VT-ST-60W
VT-ST-100W
VT-ST-150W
VT-ST-200W
VT-ST-300W







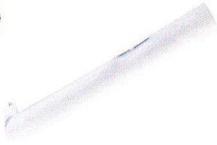
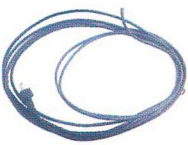
List

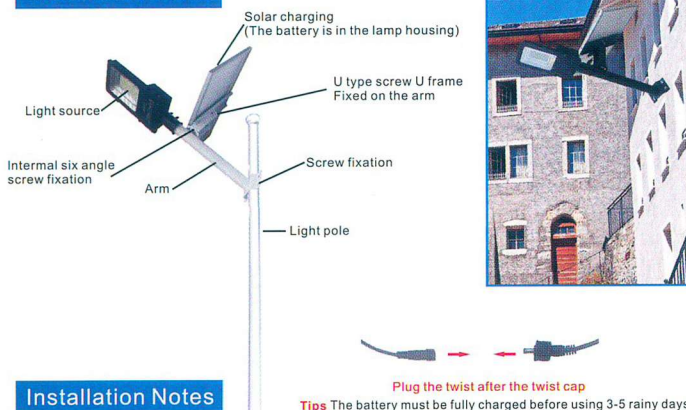Installation Guide



Installation Notes

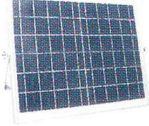- Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;
- The lamp and solar panels connected to the solar panel against the light ,the light does not shine ,unplug the connector light ,Light sense normal;
- On the front of the lamp ,5meters above the lights by AUTO(red),the button lights flash 5 under the lights And remote control is normal;
Note: the remote control must be remote control receiver ,or remote control is not sensitive remote control distance 8-15m;
- A. the lamp with two inflated studs on the wall ,as schematically;
B. The solar panel Angle adjusts according to the light intensity and time;
C. lamps can not be installed in low-lying areas ,so as not to soak;
- Plug the male and female plugs and tighten the waterproof cap and install it.
- After installation check the installation is solid ,use the remote control of the lamp to check;

1		Solar panel	2		Solar light
3		Remote control	4		expansion screw
5		U-frame	6		5m wire